

FITTING A PALAZZO BATH - INSTALLATION GUIDELINES


Fitting a Palazzo Bath with an overflow is a basic plumbing operation – but with consequences if not executed correctly.

At Palazzo Baths we pride ourselves in the quality of our product, so we strongly recommend that you use the services of a qualified installer (see our preferred suppliers list in the Annexure).

In accordance with our Warranty, we do not accept responsibility for any defect or shortcoming in the installation of a Palazzo Bath.


For your own peace of mind we offer the following Installation Guidelines, which are to be adhered to, as we do not accept responsibility for any incorrect installation.

Please ensure you have all of the following components before commencing installation:

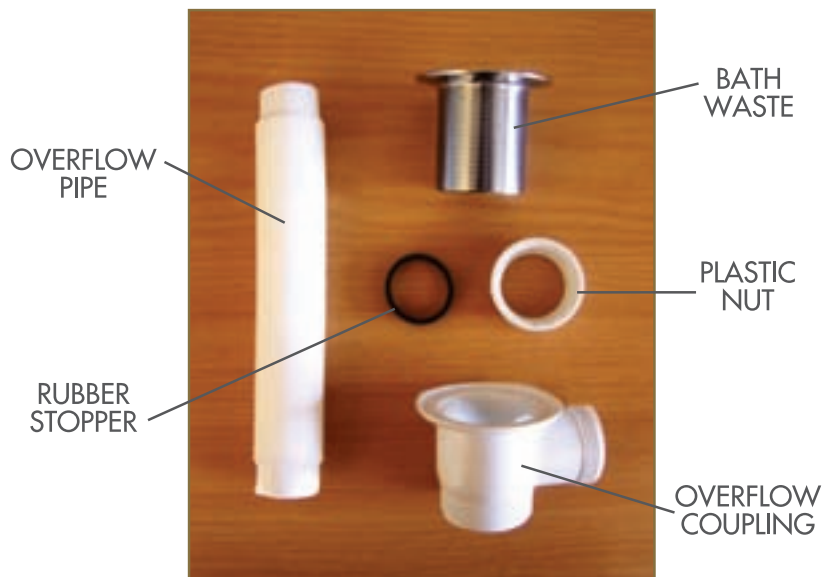

Please ensure you follow the plumbing specifications for a problem-free installation:

1. First measure and mark where you would like the bath to be placed in the room.
2. When placing a bath near a wall, leave sufficient gap between the bath and the wall for the P-Trap plumbing.
3. Note that the waste is exactly in the centre of the bath, so ensure the hole for the P-Trap is positioned exactly in the centre of where the bath will be placed.
4. The P-Trap is to be recessed below ground level – as shown in the diagram. The top of the P-Trap is positioned at the centre of the bath.
The recess must be 130mm deep with the outlet pipe 20mm below ground level.
5. Once positioned and installed, do not close the P-Trap in. Some flexibility is required for expansion and contraction in the final installation.
6. To complete the installation, it is essential that you then silicone the base of the bath to the floor.
7. Finally, to protect the newly installed bath from other builders or materials, we recommend you use the lid of the bath crate packaging until all building operations are completed.

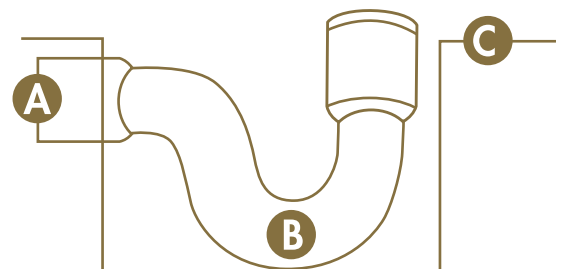

- A: OUTLETS
B: P.TRAP
C: GROUND LEVEL

STEP: 1



Attach the O-ring (or plumbers putty) onto the bath waste. Then insert the bath waste into the bath plughole.

STEP: 2



Screw the overflow coupling onto the bath waste from the underside of the bath.

STEP: 3



Attach the plastic nut onto one end of the overflow pipe.

STEP: 4




Place the rubber stopper inside the plastic nut.

STEP: 5



Now screw the plastic nut attached to the overflow pipe onto the overflow coupling.

STEP: 6

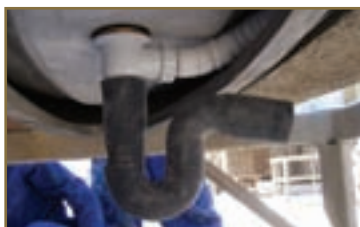

Attach the P-Trap to the bottom end of the overflow coupling. Ensure it is tightly clamped to prevent leakage.